

Quick User's Guide

For Bluetooth USB Dongle BUD-02

This is a quick User's Guide for using BlueSoleil software to run Bluetooth applications of A2DP (Stereo) or Skype (Headset or VoIP) on Exwell's Bluetooth Stereo Headset **BSH-02** and Bluetooth USB Dongle **BUD-02**. This BlueSoleil software is intended to support Bluetooth functions beyond just A2DP (Stereo) application. Please refer to IVT's website for detail User's Guide and any other support issues at <http://www.ivtcorporation.com> .

A. Install BlueSoleil software on Windows XP or 2000 or Vista

Note: please uninstall other Bluetooth software before install Bluesoleil, especially from WidComm.

1. Do not plug **BUD-02** into your PC/NB temporarily.
2. Place BlueSoleil CD, or download the software from our website at <http://www.exwell.com/support.html> and execute it without plugging in **BUD-02** .
3. Follow the installation instructions to complete the installation. (PC/NB will re-start to activate the BlueSoleil.)
4. Note and Strongly recommended: Remove the BlueSoleil from Startup list so that it will not be automatically started when system boots up. Just run or execute the BlueSoleil when you need it.

B. Run BlueSoleil for Skype

1. Execute the BlueSoleil software
2. Follow the instruction to plug into **BUD-02**.
3. Power on your Bluetooth Stereo Headset **BSH-02**.
4. Click on the bright (AA) center of the pictorial Sun to search Bluetooth devices.
5. You should find a stereo headset on the surrounding trail which matches your headset (with MAC or BD address or just a name of "Stereo Headset") and you may see other Bluetooth devices nearby as well.

Note: The sticker of MAC address may be found inside the left cushion of ear cup, or back of the devices in other Bluetooth models.

6. You may click the (AA) to stop searching or let it run out of searching time.
7. Click on the stereo headset to activate a connection and available services.
8. You will see the icons of available application services which are highlighted and framed.
9. For **BSH-02**, you will see (BB) speaker for stereo music and (CC) headset for Skype or Mono Audio-MIC headset application.
10. Click (CC). The LED will blink and you will hear ring tones through the headset to indicate a connection established.
11. On the headset, click on the phone pick up button (same as power button on **BSH-02**.)
12. Go ahead to use Skype as usual. You may listen and talk on the Bluetooth headset.

Note: When using Skype, if you do not hear any voice you may need to check on "Control Panel" - "Sounds and Audio Devices" - "Audio" to check if Windows has switched your Sound device to Bluetooth. If not, you need to switch to **BUD-02** - "Bluetooth SCO Audio".

C. Run BlueSoleil for A2DP Stereo Bluetooth

1. Follow the step 1-9 in section B.
2. Click (BB). The LED will blink to indicate a connection established. On **BSH-02**, you will hear a short music played for connection.
3. Go ahead and play your favorite music on PC/NB.



D. More Instructions for IVT BlueSoleil Software

You can find the complete user manual for BlueSoleil software from our website at

http://support.exwell.com/userguides/bluesoleil_user_manual_1.4.pdf.

Thank you for purchasing our Bluetooth USB Dongle BUD-02!